

Battery Maintenance Instruction


Before the first usage, please check the battery status as the following instructions:

1. Charging the battery to recommended storage voltage 46.2V with Tattu TA1200 charger or other professional chargers.
2. After charging the battery to 46.2V, if the battery LED indicators show as the following two modes, the battery is in good status.

● on ○ off ⊙ flash

| Remaining Capacity | LED 1 | LED 2 | LED 3 | LED 4 |
|--------------------|-------|-------|-------|-------|
| 38%~49% | ● | ● | ○ | ○ |
| 50%~62% | ● | ● | ⊙ | ○ |

3. If the status LEDs (LED5/LED6/LED7) are on, please identify the error according to the following guidelines.

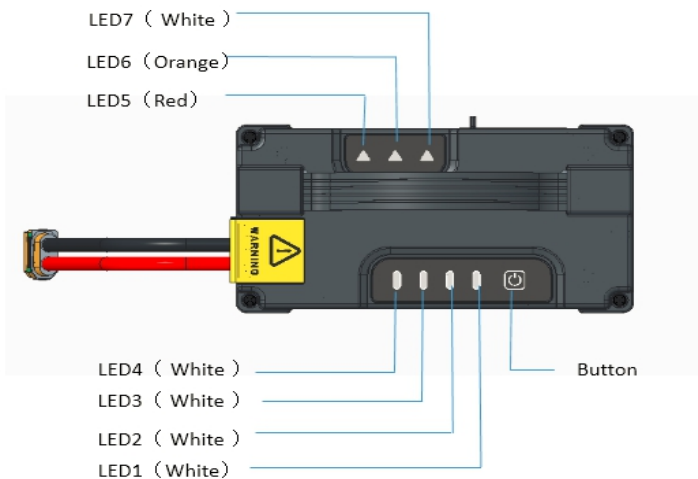

Status LED indication

| Red LED5 | Orange LED6 | White LED7 | Decription |
|----------|-------------|------------|--|
| ● | | | ①In storage mode |
| | | ■ | ②Maintenance charging is needed |
| ● | | ■ | ③Error, maintenance charging is needed |



Shenzhen Grepow Battery CO.,LTD

If the LEDs still on after charging, please don't use the battery further and contact our RMA team for more information.

Please be aware:

Please activate the battery every 3 months according to the following method: Charging the battery at 0.2C to 50.4V, rest 5 min, then discharge with 0.2C to 40.8V, rest 5 min, then charge the battery again at 0.2C to 46.8V.

If further support is expected, please contact our RMA team for more information.

DE office: rma@genspow.de

USA office: info@genstattu.com

CN office: info@gensace.com